


Installationsguide

Inteno




DG200 Multi WAN Residential Gateway


DG200

Multi WAN Residential Gateway

Ovansida

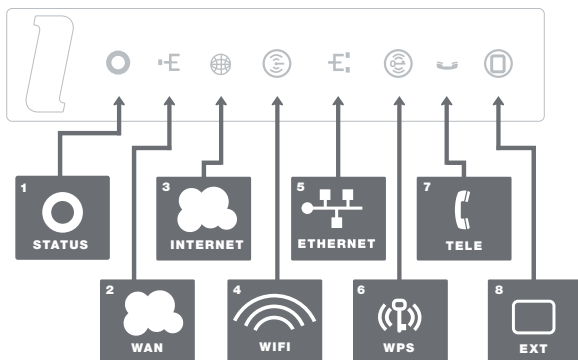

Baksida

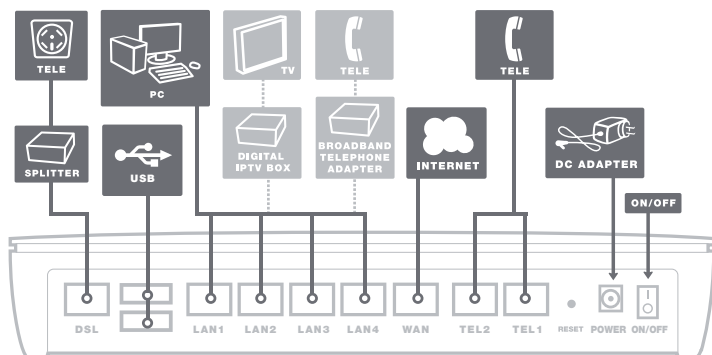

Den här installationsguiden hjälper dig att installera Inteno DG200. DG200 kopplas in i ditt Ethernet-baserade bredbandsnät.

Startboxen

Kontrollera att följande finns med i startboxen:

- » 1 Inteno DG200
- » 1 DC-adapter (strömadapter)
- » 1 RJ45 Nätverkskabel (röd, stor kontakt)

Inkoppling till WAN/Bredbandsuttag

Gör så här:

1. Stäng av din dator.
2. Koppla en RJ45 nätverkskabel mellan ditt bredbandsuttag och DG200 WAN-kontakt märkt *WAN*.

Inkoppling av LAN

1. Koppla en RJ45 nätverkskabel mellan DG200 nätverkskontakt *LAN1* och nätverkskontakten på baksidan eller sidan av din dator. Finns fler datorer än en, används därefter *LAN2*, *LAN3* samt *LAN4*.
2. Koppla slutligen in strömadapter till eluttaget och den andra änden i kontakten på DG200 märkt *Power*.
3. Starta datorn.
4. Lamporna på din DG200 kommer att blinka i cirka 30 sekunder. Har du gjort allting rätt så kommer lamporna *Status*, *WAN* och *Internet* att lysa med fast grönt sken på din DG200, se bild "*Ovansida*". Du är nu färdig med inkopplingen av DG200.

Inkoppling av trådlöst nät (WiFi)

1. Se till att WiFi-indikatorn på din DG200 (se bild "*Ovansida*", 4 *WiFi*) är grön (2,4 GHz WiFi aktivt) eller blå (2,4 GHz och 5,0 GHz WiFi aktivt).
2. Gör en sökning efter trådlösa nätverk på din dator.
3. Jämför de nätverksnamn (SSID) som du får fram med det som anges på klisterlappen på undersidan av DG200.
4. Anslut genom att dubbelklicka på rätt nätverksnamn och skriv därefter in lösenordet. Detta hittar du på klisterlappen märkt "*WiFi key*" på undersidan av DG200.

Inkoppling av IP-telefoni

1. Koppla in er telefonsladd i ett av uttagen på routerns baksida märkt *Tele1* eller *Tele2*, det spelar ingen roll vilken du väljer.
2. Nu ska luren på routerns ovasida lysa grönt och det är bara att börja använda tjänsten.
3. Blinkar luren grönt med snabba intervaller eller är släckt ber vi dig kontakta vår kundtjänst. 0770-811000.

OBSERVERA! Telefonitjänsten fungerar endast om du beställt IP-telefoni av Bredband2.

För att få mer information om de Plustjänster som ingår och vilka tilläggstjänsten som ni kan beställa hänvisar vi till vår hemsida:

<https://www.bredband2.com/guider>

Beskrivning av ovanpanelen

Grafik på ovanpanel:

1. Status

Grön: Strömmen är på

Röd: Uppstartsfel

(kontakta Bredband2)

Släckt: Strömmen är av

2. WAN

Grön: Ansluten till nätverket

Släckt: Nätverksanslutning misslyckades

3. Internet

Grön: Ansluten till internet

Röd: Internetanslutning misslyckades

4. WiFi

Grön: WiFi 2.4 GHz aktivt

Blå: WiFi 2.4 GHz och 5.0 GHz aktivt

Släckt: WiFi inte aktivt

5. Ethernet

Grön: LAN uppkopplad

Släckt: LAN ej uppkopplad

6. WPS

Blinkar grön: WPS-registrering pågår

7. TELE

Grön: Terminal ansluten

Blinkar grön: Terminalen kan inte registreras

8. EXT

Används ej.

3. Lyser Status eller Internet indikatorn rött?

Kontakta din operatör.

4. Är WAN-indikatorn släckt?

Kontrollera anslutningen mellan WAN-porten på din DG200 och ditt bredbandsuttag. Om WAN-indikatorn trots korrekt inkoppling är släckt, kontakta Bredband2.

5. Är Ethernet-indikatorn släckt?

Kontrollera anslutningen mellan LAN-porten på din DG200 och nätverkskontakten på baksidan eller sidan av din dator. Kontrollera också att nätverkskortet i din dator fungerar.

6. Resetknapp

Se bild "*Baksida*".

Med denna knapp återställer du din DG200 till fabriksinställningar. Håll den intryckt i 10 sekunder.

Access till DG200 web-gränssnitt

IP: 192.168.1.1

Användarnamn: Bredband2

Lösenord: Se klisterlappen på undersidan av routern.

Felsökning

1. Kontrollera att strömmen är på.

Spänningslampan (*Status*) på din DG200 ska lysa. Se bild "*Ovansida*".

2. Är spänningslampan (Power) släckt?

Kontrollera om din DG200 verkligen är ansluten till DC-adaptorn (strömadaptorn). Kontrollera också att DC-adaptorn är ansluten i ett eluttag. Om din DG200 är korrekt ansluten till eluttaget och spänningslampan trots detta är släckt, kan detta indikera en trasig DG200 eller DC-adapter. Kontakta Bredband2.

Bredband2 kontaktuppgifter

Telefon: 0770-811 000


E-post: router@bredband2.se

Hemsida: www.bredband2.com


DG200

Multi WAN Residential Gateway

Top

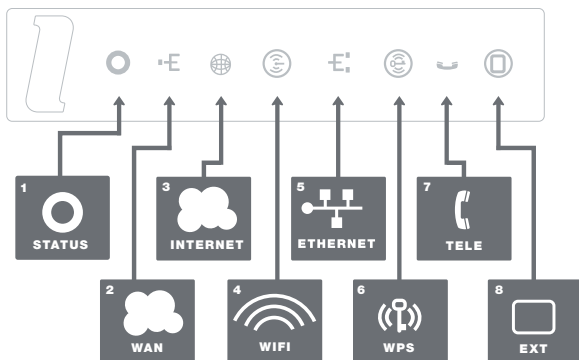

Back

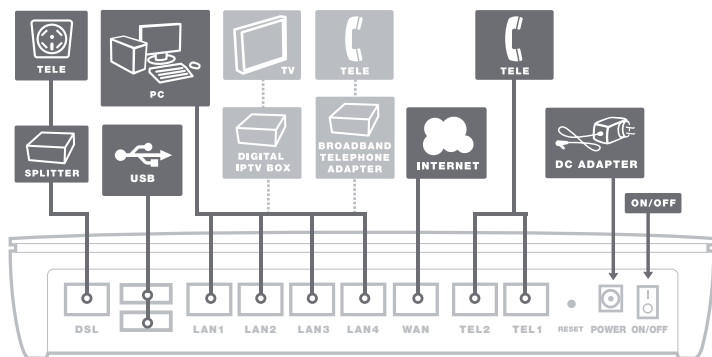

This installation guide will help you install the Inteno DG200. DG200 should be connected to an Ethernet based broadband network.

Start box

Check that the following items are included in the start box:

- » 1 Inteno DG200
- » 1 Power adapter
- » 1 RJ45 Network cable (red, large contact)

Connecting the WAN/broadband connection

Do as follows:

1. Shut down your computer.
2. Connect a RJ45 network cable between your broadband outlet and the DG200 WAN port (marked *WAN*).

Connecting the LAN

1. Connect a RJ45 network cable between the DG200 network port (LAN 1-4) and the network port on the back or side of your computer. If you have more computers, use *LAN2*, *LAN3* and *LAN4*.
2. Finally, plug the power adapter into an electrical outlet and contact into the DG200 where it is labeled "Power"
3. Start the computer.
4. The colored lights will blink for approximately 30 seconds. If you have connected your DG200 properly, the *Status*, *WAN* and *Internet* lights will be a fixed green color. See picture labeled "Top." You have now connected the DG200.

Connecting the WiFi

1. Make sure that the WiFi indicator (see illustration "Top", 4 WiFi) on your DG200 is green (2.4 GHz active) or blue (2.4 and 5.0 GHz active).
2. Make a search for wireless networks on your computer.
3. Compare the list of network names (SSIDs) with the name shown on a sticker on the bottom of the DG200.
4. Connect by double clicking on the correct SSID and then enter the password. This can be found on the sticker labeled "WiFi key" on the under side of the DG200.

Connecting the IP-telephony

If you have ordered your IP-telephony from us, you can connect an analog phone in your router.

1. Plug in your phone cord into one of the phone jacks on the rear of the router marked Tele1 or Tele2, no matter which one you choose.
2. Now the phone indicator on the top of the router will have a fixed green light and you can start using the service.
3. If the phone indicator is blinking green with fast intervals or isn't lit you need to contact our customer service. 0770-811000.

NOTE! The router can only be used for the telephone service if you have ordered IP-telephony from Bredband2.

For more information about the Plustjänster included and the additional services that is available please visit our website: <https://www.bredband2.com/guider>

Description of the top panel

Graphics on the top panel:

1. Status

Green: The power is on

Red: Start up error
(contact Bredband2)

Off: The power is off

2. WAN

Green: Connected to the network

Off: Connection to the network failed

3. Internet

- Green:** Connected to internet
- Red:** Connection to internet failed

4. WIFI

- Green:** WiFi 2.4 Ghz active
- Blue:** WiFi 2.4 GHz and 5.0 GHz active
- Off:** WiFi not active

5. Ethernet

- Green:** LAN connected
- Off:** LAN not connected

6. WPS

- Blinking green:**
WPS registration in progress

7. TELE

- Green:** The terminal is registered
- Blinking green:** The terminal can not register

8. EXT

- Not in use.

Access DG200 browser interface

IP: 192.168.1.1

User name: Bredband2

Password: See sticker on the bottom of the DG200.Troubleshooting

1. Check that the power is on.

The power indicator light should be on (Status). See picture labeled "Top"

2. Is the power indicator light off?

Check that the DG200 is properly connected to the power adapter. Check that the power adapter is connected to an electrical outlet. If the DG200 is properly connected to an electrical outlet, a power

indicator light that is still not on may indicate a faulty DG200 or a faulty power adapter. Contact Bredband2.

3. Are the Status and Internet indicator lights red?

Contact Bredband2.

4. Is the WAN indicator light off?

Check the connection between the broadband outlet and the DG200 WAN port (WAN). If the WAN indicator light is off, despite proper connection, contact Bredband2.

5. Is the Ethernet indicator light off?

Check the connection between the LAN port on the DG200 and the network port on the back or side of your computer. Check that the NIC (network interface card) in your computer is functioning properly.

6. Reset button.

See picture labeled "Back". This button resets the DG200 to factory settings. Press for 10 seconds.

Bredband2 contact information

Phone: 0770-811 000

Email: router@bredband2.se

Webpage: www.bredband2.com

Tack för att du vill vara
kund hos Bredband2!



Många snackar.
Vi lyssnar.



Bredband2
Många snackar. Vi lyssnar.

www.bredband2.com